
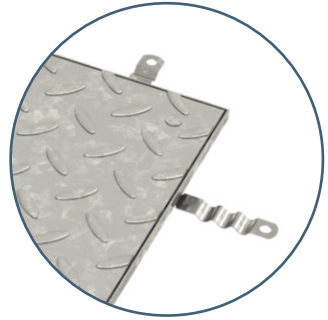


Installation manual

ACO Access Covers

SOLID FR

- |            |  |            |  |
|------------|--|------------|--|
| <b>ENG</b> | <b>Installation Manual<br/>ACO Access Cover</b>          | <b>EST</b> | <b>Paigaldusjuhend</b>                                     |
| <b>GER</b> | <b>Installationsanleitung<br/>ACO Schachtabdeckungen</b> | <b>LAV</b> | <b>Uzstādīšanas instrukcija<br/>ACO Tehnisko lūku vāki</b> |
| <b>FRA</b> | <b>Instructions d´installation</b>                       | <b>LIT</b> | <b>Montavimo instrukcija<br/>ACO apžiūros liukai</b>       |
| <b>ESP</b> | <b>Manual De Instalación<br/>ACO Tapas de registro</b>   | <b>POL</b> | <b>Instrukcja montażu</b>                                  |
| <b>POR</b> | <b>Manual de Instalação</b>                              | <b>BUL</b> | <b>Инструкции за инсталация</b>                            |
| <b>ITA</b> | <b>Manuale d´installazione<br/>ACO Access Cover</b>      | <b>HUN</b> | <b>Beépítési útmutató</b>                                  |
| <b>NLD</b> | <b>Installatiehandleiding<br/>ACO Toegangsluiken</b>     | <b>RUM</b> | <b>Instructiuni de instalare</b>                           |
| <b>CZE</b> | <b>Instalační manuál</b>                                 | <b>HRV</b> | <b>Upute za ugradnju</b>                                   |
| <b>RUS</b> | <b>Инструкция По Установке</b>                           | <b>SLV</b> | <b>Navodila za vgradnjo</b>                                |
| <b>SWE</b> | <b>Installationsanvisning</b>                            | <b>SRP</b> | <b>Preporuka za ugradnju</b>                               |
| <b>NOR</b> | <b>Installasjons Manual</b>                              | <b>TUR</b> | <b>ACO Müdahale Kapakları</b>                              |
| <b>FIN</b> | <b>Asennusohje</b>                                       |            |  |
| <b>DAN</b> | <b>Installationsvejledning</b>                           |            |  |

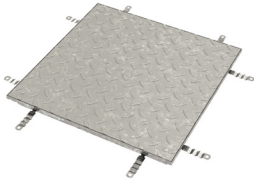

## ACO Access Covers SOLID FR





### Order information




Clear opening (A x B)	External dimensions (C x D)	Frame height	Load class (EN 124)	Weight	E	EI	Part No.
[mm]	[mm]	[mm]		[kg]			GS
300 x 300	392x392	90	A15	14,7	E120	EI45	448093
450 x 450	542x542	90	A15	24,7	E120	EI45	448094
500 x 500	592x592	90	A15	28,7	E120	EI45	448095
400 x 400	492x492	90	A15	21	E120	EI45	448096
300 x 300	392x392	90	B125	18,4	E120	EI45	448101
450 x 450	542x542	90	B125	32,2	E120	EI45	448102
500 x 500	592x592	90	B125	36,5	E120	EI45	448103
400 x 400	492x492	90	B125	28,1	E120	EI45	448104
600 x 600	692x692	90	B125	46	E120	EI45	448105
600 x 600	692x692	90	A15	37,5	E120	EI45	448112





Notes:

A large grid of small squares, intended for taking notes. The grid consists of 30 columns and 40 rows of small squares, providing a structured area for handwritten text.

Installation manual  
ACO Access Cover SOLID FR

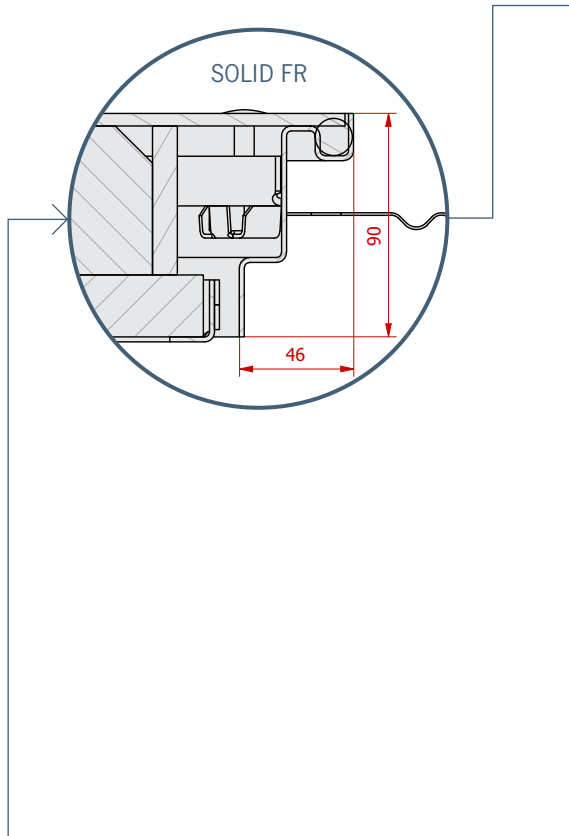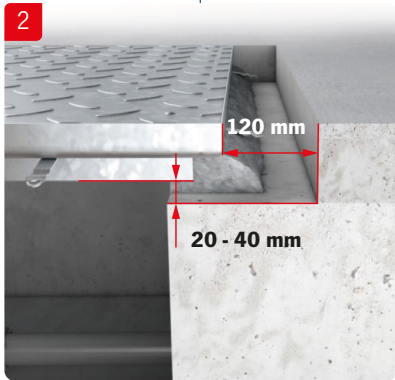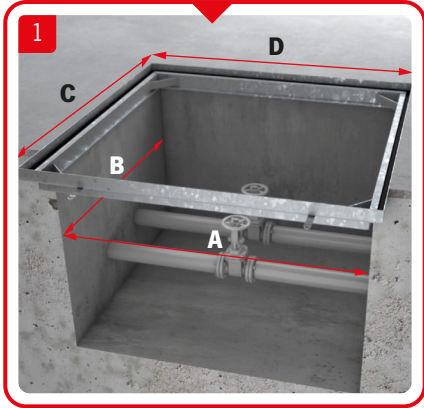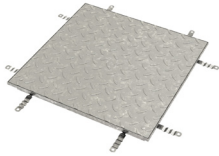

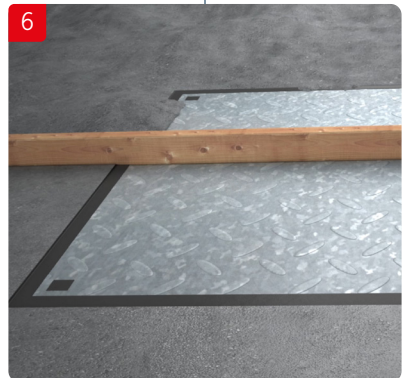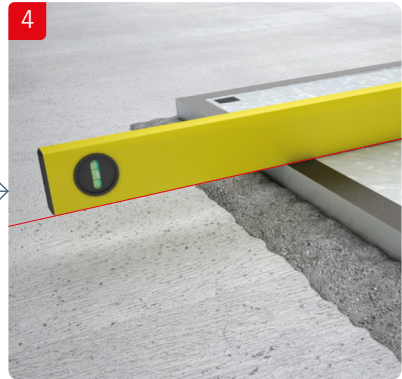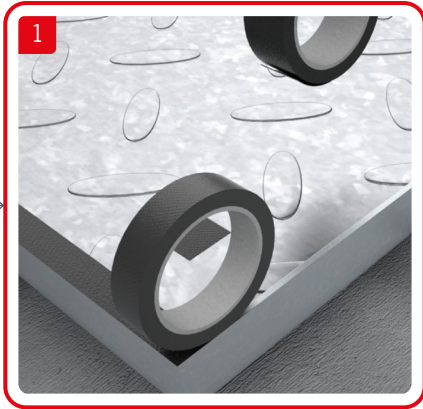

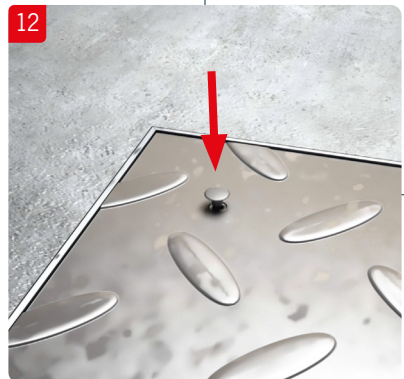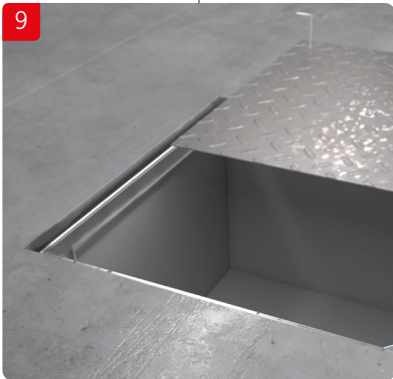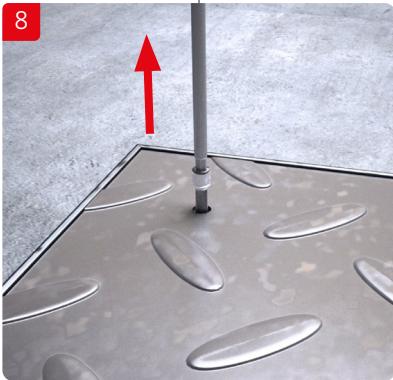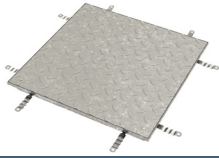





Every ACO product supports  
the ACO WaterCycle



- ACO Access Covers UNIFACE  
Fire Resistance (FR)
- ACO Access Covers PAVING  
Fire Resistance (FR)
- ACO Access Covers SOLID  
Fire Resistance (FR)
- ACO Access Covers SERVOKAT GD  
Fire Resistance (FR)



ACO Industries k.s.

Havlickova 260  
582 22 Pribyslav  
Czech Republic

[www.aco-accesscovers.com](http://www.aco-accesscovers.com)